

 










Maintenance Schedule





Items	Pre-ride Check P. 82	Frequency*1								Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36			
		× 1,000 mi	0.6	4	8	12	16	20	24			
Fuel Line					I		I		I	I		-
Fuel Level		I										74
Throttle Operation		I			I		I		I	I		114
Air Cleaner *2						R			R			93
Crankcase Breather *3				C	C	C	C	C	C			-
Spark Plug				Every 24,000 km (16,000 mi): I, Every 48,000 km (32,000 mi): R								-
Valve Clearance									I			-
Engine Oil		I	R		R		R		R	R		100
Engine Oil Filter			R				R					100
Engine Idle Speed					I		I		I	I		-
Radiator Coolant *4		I			I		I		I	I	3 Years	102
Cooling System					I		I		I	I		-
Secondary Air Supply System							I					-
Evaporative Emission Control System							I					-

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate
- C** : Clean

Items	Pre-ride Check P. 82	Frequency*1								Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36			
		× 1,000 mi	0.6	4	8	12	16	20	24			
Drive Chain	I		Every 1,000 km (600 mi):						I L			108
Drive Chain Slider					I		I		I			110
Brake Fluid *4	I			I	I	I	I	I	I	I	2 Years	104
Brake Pads Wear	I			I	I	I	I	I	I	I		105
Brake System					I		I		I	I		82
Brakelight Switch					I		I		I	I		106
Headlight Aim					I		I		I	I		116
Lights/Horn	I											-
Engine Stop Switch	I											-
Clutch System	I			I	I	I	I	I	I	I		111
Side Stand	I				I		I		I	I		107
Suspension					I		I		I	I		118
Nuts, Bolts, Fasteners					I		I		I	I		-
Wheels/Tyres		I			I		I		I	I		90
Steering Head Bearings					I		I		I	I		-

Notes:

*1: At higher odometer readings, repeat at the frequency interval established here.

*2: Service more frequently when riding in unusually wet or dusty areas.

*3: Service more frequently when riding in rain or at full throttle.

*4: Replacement requires mechanical skill.