













Items	Pre-ride Check P. 121	Frequency*1								Annual Check	Regular Replace	Refer to page	
		× 1,000 km	1	6	12	18	24	30	36				
		× 1,000 mi	0.6	4	8	12	16	20	24				
Fuel Line					I		I		I	I		–	
Fuel Level		I										113	
Throttle Operation		I			I		I		I	I		161	
Air Cleaner *2						R			R			135	
Spark Plug			Every 24,000 km (16,000 mi): I, Every 48,000 km (32,000 mi): R										–
Valve Clearance								I				–	
Engine Oil		I		R		R		R		R		145	
Engine Oil Filter			R					R				145	
Engine Idle Speed					I		I		I	I		–	
Radiator Coolant *3		I			I		I		I	I	3 Years	147	
Cooling System					I		I		I	I		–	
Secondary Air Supply System								I				–	
Evaporative Emission Control System (Except II IN, II MA)								I				–	
Exhaust Gas Control Actuator Cable								I				–	






Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate

Maintenance Schedule

Items	Pre-ride Check P. 121	Frequency*1								Annual Check	Regular Replace	Refer to page			
		× 1,000 km	1	6	12	18	24	30	36						
		× 1,000 mi	0.6	4	8	12	16	20	24						
Drive Chain	I	Every 1,000 km (600 mi): I L										153			
Drive Chain Slider					I		I		I			156			
Brake Fluid *3	I			I	I	I	I	I	I	I	2 Years	149			
Brake Pads Wear	I			I	I	I	I	I	I	I		150			
Brake System					I		I		I	I		121			
Brakelight Switch					I		I		I	I		151			
Headlight Aim					I		I		I	I		162			
Lights/Horn	I											-			
Engine Stop Switch	I											-			
Clutch System	I			I	I	I	I	I	I	I		157			
Side Stand	I				I		I		I	I		152			
Suspension					I		I		I	I		164			
Front Fork Oil (CBR1000S1)					Every 30,000 km (20,000 mi): R									3 Years	-
Nuts, Bolts, Fasteners						I		I		I	I		-		
Wheels/Tyres		I				I		I		I	I		132		
Steering Head Bearings						I		I		I	I		-		

Notes:

*1 : At higher odometer readings, repeat at the frequency interval established here.

*2 : Service more frequently when riding in unusually wet or dusty areas.

*3 : Replacement requires mechanical skill.