












Except KO, II KO type

Items	Pre-ride Check P. 133	Frequency*1								Annual Check	Regular Replace	Refer to page	
		× 1,000 km	1	6	12	18	24	30	36				
		× 1,000 mi	0.6	4	8	12	16	20	24				
Fuel Line					I		I		I	I		-	
Fuel Level		I										122	
Throttle Operation		I			I		I		I	I		165	
Air Cleaner *2						R			R			-	
Spark Plug			Every 24,000 km (16,000 mi): I, Every 48,000 km (32,000 mi): R										-
Valve Clearance								I				-	
Engine Oil		I	R		R		R		R	R		-	
Engine Oil Filter			R				R					-	
Engine Idle Speed					I		I		I	I		-	
Radiator Coolant *3		I			I		I		I	I	3 Years	154	
Cooling System					I		I		I	I		-	
Secondary Air Supply System							I					-	
Evaporative Emission Control System (TH, II TH type only)								I				-	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate

