











Maintenance Schedule

MA, II MA type

| Items | Pre-ride Check P. 70 | Frequency *1 | | | | | | | | Annual Check | Regular Replace | Refer to page |
|-----------------------------|---|--------------|-----|---|---------------------|----|----|---------------------|----|--------------|-----------------|---------------|
| | | × 1,000 km | 1 | 6 | 12 | 18 | 24 | 30 | 36 | | | |
| | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | | | |
| Fuel Line |  | | | | I | | I | | I | I | | - |
| Fuel Level | I | | | | | | | | | | | - |
| Throttle Operation |  | I | | | I | | I | | I | I | | 103 |
| Air Cleaner *2 |  | | | | | R | | | R | | | 81 |
| Spark Plug |  | | | | Every 24,000 km : I | | | Every 48,000 km : R | | | | - |
| Valve Clearance |  | | | | | | | | I | | | - |
| Engine Oil | I | | R | | R | | R | | R | R | | 88 |
| Engine Oil Filter | | | R | | | | R | | | | | 88 |
| Engine Idle Speed |  | | | | I | | I | | I | I | | - |
| Radiator Coolant *3 | I | | | | I | | I | | I | I | 3 Years | 90 |
| Cooling System |  | | | | I | | I | | I | I | | - |
| Secondary Air Supply System |  | | | | | | I | | | | | - |

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L : Lubricate
- R : Replace

| Items | Pre-ride Check P. 70 | Frequency *1 | | | | | | | | | Annual Check | Regular Replace | Refer to page |
|------------------------|----------------------------|--------------|-----|------------------------------|----|----|----|----|----|---|-----------------|--------------------|------------------|
| | | × 1,000 km | 1 | 6 | 12 | 18 | 24 | 30 | 36 | | | | |
| | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | | | | |
| Drive Chain | ☑ | | | Every 1,000 km (600 mi): ☑ ☒ | | | | | | | | 96 | |
| Drive Chain Slider | | | | | ☑ | | ☑ | | ☑ | | | 99 | |
| Brake Fluid *3 | ☑ | | | ☑ | ☑ | ☑ | ☑ | ☑ | ☑ | ☑ | ☑ | 2 Years | 92 |
| Brake Pads Wear | ☑ | | | ☑ | ☑ | ☑ | ☑ | ☑ | ☑ | ☑ | ☑ | | 93 |
| Brake System | | | | | ☑ | | | ☑ | | ☑ | ☑ | | 70 |
| Brakelight Switch | | | | | ☑ | | | ☑ | | ☑ | ☑ | | 94 |
| Headlight Aim | | | | | ☑ | | | ☑ | | ☑ | ☑ | | 104 |
| Lights/Horn | ☑ | | | | | | | | | | | | - |
| Engine Stop Switch | ☑ | | | | | | | | | | | | - |
| Clutch System | ☑ | | | ☑ | ☑ | ☑ | ☑ | ☑ | ☑ | ☑ | ☑ | | 100 |
| Side Stand | ☑ | | | | ☑ | | | ☑ | | ☑ | ☑ | | 95 |
| Suspension | ☑ | | | | ☑ | | | ☑ | | ☑ | ☑ | | 106 |
| Nuts, Bolts, Fasteners | ☑ | | | | ☑ | | | ☑ | | ☑ | ☑ | | - |
| Wheels/Tyres | ☑ | | | | ☑ | | | ☑ | | ☑ | ☑ | | 78 |
| Steering Head Bearings | ☑ | | | | ☑ | | | ☑ | | ☑ | ☑ | | - |

Notes:

*1 : At higher odometer reading, repeat at the frequency interval established here.

*2 : Service more frequently when riding in unusually wet or dusty areas.

*3 : Replacement requires mechanical skill.