












# Maintenance Schedule

Items	Pre-ride Check ➔ P. 94	Frequency*1									Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36				
		× 1,000 mi	0.6	4	8	12	16	20	24				
Fuel Line					I		I		I	I		-	
Fuel Level		I										83	
Throttle Operation		I			I			I		I		137	
Air Cleaner *2						R				R		105	
Crankcase Breather*3				C	C	C		C	C	C		138	
Spark Plug				Every 24,000 km (16,000 mi): I Every 48,000 km (32,000 mi): R									-
Valve Clearance								I				-	
Engine Oil		I		R		R		R		R	R	118	
Engine Oil Filter				R				R				118	
Clutch Oil Filter*6				R				R				120	
Engine Idle Speed*9					I			I		I	I	-	
Radiator Coolant *5		I			I			I		I	I	3 Years 122	
Cooling System					I			I		I	I	-	
Secondary Air Supply System								I				-	
Evaporative Emission Control System*8								I				-	

## Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

## Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L** : Lubricate
- R** : Replace
- C** : Clean

Items	Pre-ride Check P. 94	Frequency*1								Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36			
		× 1,000 mi	0.6	4	8	12	16	20	24			
Drive Chain*4	I	Every 1,000 km (600 mi): I L										128
Drive Chain Slider*4				I	I	I	I	I			132	
Brake Fluid *5	I		I	I	I	I	I	I	I	2 Years	124	
Brake Pads Wear	I		I	I	I	I	I	I	I		125	
Brake System				I		I		I	I		94	
Brakelight Switch				I		I		I	I		126	
Brake Lock Operation*6	✂		I	I	I	I	I	I			126	
Headlight Aim				I		I		I	I		139	
Lights/Horn	I										-	
Engine Stop Switch	I										-	
Clutch System*7	I		I	I	I	I	I	I	I		134	
Side Stand	I			I		I		I	I		127	
Suspension	✂			I		I		I	I		-	
Nuts, Bolts, Fasteners*4	✂			I		I		I	I		-	
Wheels/Tyres*4	✂	I	I	I	I	I	I	I	I		102,133	
Steering Head Bearings	✂			I		I		I	I		-	

**Notes:**

- \*1: At higher odometer readings, repeat at the frequency interval established here.  
 \*2: Service more frequently when riding in unusually wet or dusty areas.  
 \*3: Service more frequently when riding in rain or at full throttle.  
 \*4: Service more frequently when riding OFF-ROAD.

- \*5: Replacement requires mechanical skill.  
 \*6: CRF1000D/D II/DL/DL II only  
 \*7: CRF1000A/A II/AL/AL II only  
 \*8: II FO, III FO, III MA, IV MA type only  
 \*9: GS, II GS, III GS, IV GS, III IN, IV IN type only