












II IN, II MA type

Items	Pre-ride Check P. 239	Frequency*1								Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36			
		× 1,000 mi	0.6	4	8	12	16	20	24			
Fuel Line					I		I		I	I		-
Fuel Level		I										224
Throttle Operation		I			I		I		I	I		284
Air Cleaner *2						R			R			250
Crankcase Breather*3				C	C	C	C	C	C			285
Spark Plug					Every 24,000 km: I		Every 48,000 km: R					-
Valve Clearance								I				-
Engine Oil		I		R		R		R		R	R	264
Engine Oil Filter			R					R				264
Clutch Oil Filter*6			R					R				266
Engine Idle Speed					I			I		I	I	-
Radiator Coolant *5		I			I			I		I	I	3 Years 268
Cooling System					I			I		I	I	-
Secondary Air Supply System								I				-
Evaporative Emission Control System								I				-

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L : Lubricate
- R : Replace
- C : Clean

Maintenance Schedule

Items	Pre-ride Check P. 239	Frequency*1								Annual Check	Regular Replace	Refer to page	
		× 1,000 km	1	6	12	18	24	30	36				
		× 1,000 mi	0.6	4	8	12	16	20	24				
Exhaust Gas Control Actuator Cable	✘						I						-
Drive Chain*4	I	Every 1,000 km (600 mi): I L											275
Drive Chain Slider*4					I		I		I				278
Brake Fluid *5	I			I	I	I	I	I	I	I	I	2 Years	270
Brake Pads Wear	I			I	I	I	I	I	I	I	I		271
Brake System					I		I		I	I	I		239
Brakelight Switch					I		I		I	I	I		273
Brake Lock Operation*6	⚙			I	I	I	I	I	I	I	I		272
Headlight Aim					I		I		I	I	I		286
Lights/Horn	I												-
Engine Stop Switch	I												-
Clutch System*7	I			I	I	I	I	I	I	I	I		281
Side Stand	I				I		I		I	I	I		274
Suspension	⚙				I		I		I	I	I		-
Nuts, Bolts, Fasteners*4	⚙				I		I		I	I	I		-
Wheels/Tyres*4	✘ I			I	I	I	I	I	I	I	I		247, 279
Steering Head Bearings	✘				I		I		I	I	I		-

Notes:

*1: At higher odometer readings, repeat at the frequency interval established here.

*2: Service more frequently when riding in unusually wet or dusty areas.

*3: Service more frequently when riding in rain or at full throttle.

*4: Service more frequently when riding OFF-ROAD.

*5: Replacement requires mechanical skill.

*6: CRF1100DL/DL2/DL4 only

*7: CRF1100AL/AL2/AL4 only