

Korea, Singapore

Items	Pre-ride Check ➡ P. 149	Frequency*1						Annual Check	Regular Replace	Refer to page
		x 1,000 km x 1,000 mi	1	12	24	36	48			
Fuel Line	↗			I	I	I	I	I		-
Fuel Level		I								131
Throttle Operation	↗	I		I	I	I	I	I		176
Air Cleaner*2	↗				R		R			-
Crankcase Breather*3				C		C	C			177
Spark Plug					R		R			163
Valve Clearance	↗				I		I			-
Engine Oil		I	R	R	R	R	R	R		165
Engine Oil Filter			R		R		R			166
Clutch Oil Filter (GL1800D/DA)			R		R		R			168
Engine Idle Speed	↗			I	I	I	I	I		-
Radiator Coolant*4		I		I	I	I	I	I	3 Years	169
Cooling System	↗			I	I	I	I	I		-
Secondary Air Supply System	↗				I		I			-
Evaporative Emission Control System	↗				I		I			-

Maintenance Level

- ↗ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
- ↘ : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C : Clean
- R : Replace

Items	Pre-ride Check P. 149	Frequency*1					Annual Check	Regular Replace	Refer to page	
		x 1,000 km x 1,000 mi	1	12	24	36				48
Final Drive Oil			0.6	8	16	24	32		3 Years	170
Brake Fluid*4	I			I	I	I	I	I	2 Years	171
Brake Pads Wear	I			I	I	I	I	I		172
Brake System				I	I	I	I	I		149
Brakelight Switch				I	I	I	I	I		173
Brake Lock Operation (GL1800D/DA)	Wrench			I	I	I	I			173
Headlight Aim				I	I	I	I	I		178
Lights/Horn	I									-
Engine Stop Switch	I									-
Clutch System (GL1800/B)				I	I	I	I	I		178
Clutch Fluid*4 (GL1800/B)	I			I	I	I	I	I	2 Years	175
Reverse Operation (GL1800/B)	Wrench			I	I	I	I			-
Side Stand	I			I	I	I	I	I		174
Suspension	Wrench			I	I	I	I	I		-
Nuts, Bolts, Fasteners	Wrench			I	I	I	I	I		-
Wheels/Tyres	I			I	I	I	I	I		-
Steering Head Bearings	Wrench			I	I	I	I	I		-

Notes:

- *1 : At higher odometer reading, repeat at the frequency interval established here.
 *2 : Service more frequently when riding in unusually wet or dusty areas.
 *3 : Service more frequently when riding in rain or at full throttle.
 *4 : Replacement requires mechanical skill.