









Maintenance Schedule









| Items | Pre-ride Check ☞ P. 72 | Frequency *1 | | | | | | | | | Annual Check | Regular Replace | Refer to page |
|----------------------------|---|--------------|-----|---|----|----|----|----|----|---|--------------|-----------------|---------------|
| | | × 1,000 km | 1 | 6 | 12 | 18 | 24 | 30 | 36 | | | | |
| | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | | | | |
| Fuel Line |  | | | I | I | I | I | I | I | I | I | | - |
| Fuel Level | | I | | | | | | | | | | | - |
| Throttle Operation |  | I | | I | I | I | I | I | I | I | I | | 101 |
| Air Cleaner *2 |  | | | | | R | | | | R | | | 81 |
| Crankcase Breather *3 | | | | C | C | C | C | C | C | C | | | 102 |
| Spark Plug | | | | | | R | | R | | R | | | 86 |
| Valve Clearance |  | | | I | I | I | I | I | I | I | | | - |
| Engine Oil | | I | R | R | R | R | R | R | R | R | R | | 90 |
| Engine Oil Strainer Screen | | | | | | C | | C | | C | | | 90 |
| Engine Idle Speed |  | | I | I | I | I | I | I | I | I | I | | - |
| Radiator Coolant *4 | | I | | | | I | | I | | I | I | 3 Years | 93 |
| Cooling System |  | | | | | I | | I | | I | I | | - |

Maintenance Level

-  : Intermediate. We recommend service by your authorised dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your scooter serviced by your authorised dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- C** : Clean

| Items | | Pre-ride Check P. 72 | Frequency *1 | | | | | | | | Annual Check | Regular Replace | Refer to page | | |
|------------------------|---|----------------------------|--------------|-----|---|----|----|----|----|----|-----------------|--------------------|------------------|---------|--------|
| | | | × 1,000 km | 1 | 6 | 12 | 18 | 24 | 30 | 36 | | | | | |
| | | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | | | | | |
| Drive Belt |  | | | | I | | R | | I | | | | | | - |
| Final Drive Oil *4 |  | | | | | | | | | | | | | 2 Years | - |
| 12 V Battery |  | | | I | I | I | I | I | I | I | I | | | | 83 |
| Brake Fluid *4 | | I | | I | I | I | I | I | I | I | I | | 2 Years | 95 | |
| Brake Shoes/Pads Wear | | I | | I | I | I | I | I | I | I | I | | | | 96, 99 |
| Brake System | | I | I | I | I | I | I | I | I | I | I | | | | 72 |
| Headlight Aim | | | | I | I | I | I | I | I | I | I | | | | 103 |
| Lights/Horn | | I | | | | | | | | | | | | | - |
| Engine Stop Switch | | I | | | | | | | | | | | | | - |
| Clutch Shoes Wear |  | | | | I | | | I | | I | | | | | - |
| Side Stand | | I | | I | I | I | I | I | I | I | I | | | | 100 |
| Suspension |  | | | I | I | I | I | I | I | I | I | | | | - |
| Nuts, Bolts, Fasteners |  | | I | | I | | | I | | I | I | | | | - |
| Wheels/Tyres |  | I | | I | I | I | I | I | I | I | I | | | | 78 |
| Steering Head Bearings |  | | | | I | | | I | | I | I | | | | - |

Notes:

*1: At higher odometer reading, repeat at the frequency interval established here.

*2: Service more frequently when riding in unusually wet or dusty areas.

*3: Service more frequently when riding in rain or at full throttle.

*4: Replacement requires mechanical skill.