

Items	Pre-ride Check ☑ P. 65	Frequency *1									Annual Check	Regular Replace	Refer to page	
		× 1,000 km	1	6	12	18	24	30	36					
		× 1,000 mi	0.6	4	8	12	16	20	24					
Fuel Line	🔧			I	I	I	I	I	I	I	I			-
Fuel Level		I												53
Throttle Operation	🔧	I		I	I	I	I	I	I	I	I			94
Air Cleaner *2	🔧						R				R			74
Crankcase Breather *3				C	C	C	C	C	C	C	C			95
Spark Plug					R		R		R		R			79
Valve Clearance	🔧			I	I	I	I	I	I	I	I			-
Engine Oil		I	R	R	R	R	R	R	R	R	R	R		83
Engine Oil Strainer Screen					C		C		C		C			83
Engine Idle Speed	🔧		I	I	I	I	I	I	I	I	I			-
Radiator Coolant *4		I			I		I		I		I	I	3 Years	86
Cooling System	🔧				I		I		I		I	I		-

## Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
- 🔧✂️ : Technical. In the interest of safety, have your scooter serviced by your dealer.

## Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- C : Clean

