

Maintenance Schedule











 













 











 





 















 






 

















Items	Pre-ride Check P. 42	Frequency*1						Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	12	24	36	48			
		× 1,000 mi	0.6	8	16	24	32			
Fuel Line				I	I	I	I	I		–
Fuel Level		I								34
Throttle Operation		I		I	I	I	I	I		78
Air Cleaner*2					R		R			53
Crankcase Breather*3				C	C	C	C			79
Spark Plug					I		R			–
Valve Clearance					I		I			–
Engine Oil		I	R	R	R	R	R	R		61
Engine Oil Filter			R		R		R			61
Engine Idle Speed				I	I	I	I	I		–
Radiator Coolant*5		I		I	I	I	I	I	3 Years	63
Cooling System				I	I	I	I	I		–
Secondary Air Supply System					I		I			–

Maintenance Level

- : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
- : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L** : Lubricate
- R** : Replace
- C** : Clean

Items	Pre-ride Check P. 42	Frequency*1						Annual Check	Regular Replace	Refer to page	
		× 1,000 km	1	12	24	36	48				
		× 1,000 mi	0.6	8	16	24	32				
Evaporative Emission Control System (KO type only)										–	
Drive Chain*4		Every 1,000 km (600 mi):  								69	
Drive Chain Slider*4										73	
Brake Fluid*5									2 Years	65	
Brake Pads Wear										66	
Brake System										42	
Brakelight Switch										67	
Headlight Aim										80	
Lights/Horn										–	
Engine Stop Switch										–	
Clutch System										75	
Side Stand										68	
Suspension										–	
Nuts, Bolts, Fasteners*4										–	
Wheels/Tyres*4			Every 6,000 km (4,000 mi): 								50, 74
Steering Head Bearings										–	

Notes:

- *1 : At higher odometer reading, repeat at the frequency interval established here.
 *2 : Service more frequently when riding in unusually wet or dusty areas.

- *3 : Service more frequently when riding in rain or at full throttle.
 *4 : Service more frequently when riding OFF-ROAD.
 *5 : Replacement requires mechanical skill.