

Maintenance Schedule

Items	Pre-ride Check ➤ P. 81	Frequency *1								Annual Check	Regular Replace	Refer to page	
		× 1,000 km	1	6	12	18	24	30	36				
		× 1,000 mi	0.6	4	8	12	16	20	24				
Fuel Line	⚙			I	I	I	I	I	I	I			-
Fuel Level		I											66
Throttle Operation	⚙	I		I	I	I	I	I	I	I			104
Air Cleaner *2	⚙					R				R			-
Crankcase Breather *3				C	C	C	C	C	C	C			-
Spark Plug				I	R	I	R	I	R				-
Valve Clearance	⚙			I	I	I	I	I	I				-
Engine Oil		I	R	R	R	R	R	R	R	R			-
Engine Oil Strainer Screen					C		C		C				-
Engine Idle Speed	⚙		I	I	I	I	I	I	I	I			-
Radiator Coolant *4		I			I		I		I	I		3 Years	95
Cooling System	⚙				I		I		I	I			-
Drive Belt	⚙				I		R		I				-
Final Drive Oil *4	⚙											2 Years	-








 









 



































 






















 























Maintenance Level

- ⚙ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.
Procedures are provided in an official Honda Shop Manual.
- ⚙ : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- C : Clean

Maintenance Schedule

Items	Pre-ride Check P. 81	Frequency *1									Annual Check	Regular Replace	Refer to page	
		× 1,000 km	1	6	12	18	24	30	36					
		× 1,000 mi	0.6	4	8	12	16	20	24					
Battery														92
Brake Fluid *4												2 Years		97
Brake Shoes/Pads Wear														98, 102
Brake System														81
Brake Lock Operation														56
Headlight Aim														-
Lights/Horn														-
Clutch Shoes Wear														-
Side Stand														103
Suspension														-
Nuts, Bolts, Fasteners														-
Wheels/Tyres														87
Steering Head Bearings														-

Notes:

*1 : At higher odometer reading, repeat at the frequency interval established here. *3 : Service more frequently when riding in rain or at full throttle.

*2 : Service more frequently when riding in unusually wet or dusty areas.

*4 : Replacement requires mechanical skill.